

875—95.3(89) Installation. Water heaters shall be installed in accordance with the manufacturer's recommendations. Water heaters designed solely for heating potable water shall not be used for space heating. Water heaters designed for both space heating and potable water must comply with 875—Chapter 94. Water heaters shall not be installed for use at temperatures exceeding 210 degrees Fahrenheit or for pressures exceeding 160 psig. When the water supply to a water heater exceeds 75 percent of the design pressure of the water heater, a pressure-reducing valve is required.